



Installing your Sureguard Shield using the "Sure-Seal" install kit.

1:



Remove install kit from Shield.

2:



Wet inside wall of Shield by spraying water.

3:



Wet the outside of bollard by spraying water.

4:



Position "Fill hole" facing yourself, then place Shield over bollard.

5:



Shake up can of "Sure-Seal" foam and inject into "fill hole".

6:




Slowly rotate Shield while injecting foam.

7:



Complete as much of the rotation as possible.

8:

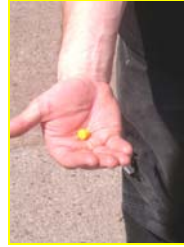

Then using the "Body plug" (incl. in kit.)...

9:



Quickly remove the straw and put the "Body plug" into the "Fill hole". Face the plug to the back.

10:



Press down on Shield to prevent "Rising" for approx. 5min.

*Allow 24 hrs. to completely cure.

*Clean up tips:

= **Over filled foam**= Let foam harden (approx.24hrs.). It will then easily break away when you "pick it" from the "Body plug" or break loose from the base. Any remaining foam can be removed using a steel brush or scraper.

- **Bumper marks & transfers (Paint, dirt, etc.)**= Using an all purpose cleaner and a scrub bush you can remove most marks from the Sureguard Shield.

Questions? Please call us @ (800) 756-3537
Visit us @ www.sureguard.ca